



The sensor HTM9U is an interior device intended for sensing of environment temperature and relative humidity of air without aggressive admixtures. The device is equipped with one universal DI and one universal DO with PWM option. The electronic system of the sensor consists of two parts. The T+RH sensor is located in the front panel and the main part with terminal boards is located in the box that is inserted in the installation box. The communication with superior system is led in the line RS485 by the protocol Modbus RTU and the device always operates in the "slave" mode. The common chemically non-aggressive environment suits working conditions under which the sensors require no maintenance or service. The device configuration is made with sensor connection, using the standard USB cable, to PC with Windows system using the freeware application USB_SET.


Rev.: 01 (FW: Reg_HTM9U_L151_b001 a vyšší)

8.11.2019

Basic technical parameters

Supply voltage	12 to 30 VDC
Current consumption	Max. 25 mA (without charged output OUT)
Temperature/humidity resolution	0.1°C / 0.1 %RH
Max. error of temperature measurement	± 0.5°C (20 - 40°C), ± 1°C (0 - 60°C)
Max. error of relative humidity measurement (+25°C)	± 3 % (20 - 80 %RH)
Type of used sensor T+RH	SHT31 (fig. 3)
Range of working temperature and humidity	Max. 40°C / 0 - 90 %RH without condensation, see: Working conditions of sensor SHT31 (fig.3)
Recommended calibration interval	2 year
Settling time	2h
Range of recommended storage temp. / RH	10 - 50 °C/ 20- 60 %RH
DO (digital output)	Active, open-drain type, max 100mA, max. 20kHz
Voltage level of output OUT	Hi « Ucc - 0,8V, Lo == 0V
DI (digital input)	Active – activated by terminals connection 8,9 = 1 Passive - >7V = 0 <3V = 1
Galvanic separation of DI and DO	no
Communication	RS485, protocol ModBus RTU, 8bits 1 stop bit, no parity
Max. number of sensors in the line	254 (R in > 96kΩ)
Baud rate	1200 - 57600 Bd
Galvanic separation RS485	yes, < 50V
Configuration and upgrade program	USB SET; freeware; www.regmet.cz

Layout of connecting terminals and connectors (fig. 1)

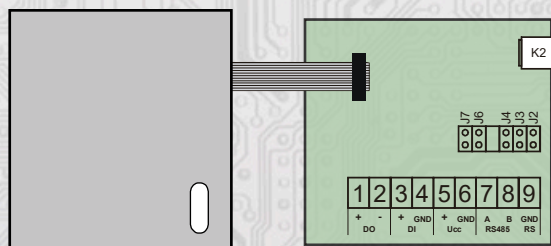

K2...connector USB mini B

J2...definition of still stand (conductor A)

J3... definition of still stand (conductor B)

J4...terminal resistor 120R

J6...device configuration

J7... reset

Terminal 1 positive pole output of supply voltage for DO

Terminal 2 DO - digit. output of open – drain type

(the load is connected between terminals 1,2)

Terminal 3 DI - digit. input (it gets activated by connection of terminals, by external voltage of these terminals)

Terminal 4 DI - GND

Terminal 5, 6... supply

Terminal 7.....RS485A (galvanic separated)

Terminal 8.....RS485B (galvanic separated)

Terminal 9.....GND - RS485 (galvanic separated)

Positive terminal of supply (5) and positive terminal DO (1) are galvanically connected.

Negative terminal of supply (6) and negative terminal DI (4) are galvanically connected.

Working conditions of the sensor SHT31:

The sensor steadily works within the recommended measurement range that is $5 \div 60$ °C and $20 \div 80$ % RH. The long-term exposition to the high humidity, namely $>80\%$ RH causes the gradually increasing reading deviation of RH ($+3\%$ RH after 60 hours $>80\%$ RH). After returning back to normal range the RH measurement gets slowly back to calibrated values.

1.1 Properties of communication protocol:

Protocol Modbus RTU with adjustable Baud rate 1200 - 57600 Bd, 8 bits, no parity, 1 stop bit, line RS485, half-duplex operation.

Supported features: 03 (0x03): Read Holding Registers


04 (0x04): Read Input Registers

06 (0x06): Write Single Register

16 (0x10): Write Multiple Registers

The communication protocol description is available at www.regmet.cz, in the document named the Implementation of Modbus protocol in devices Regmet of second generation.

Example of wiring the sensors in the system

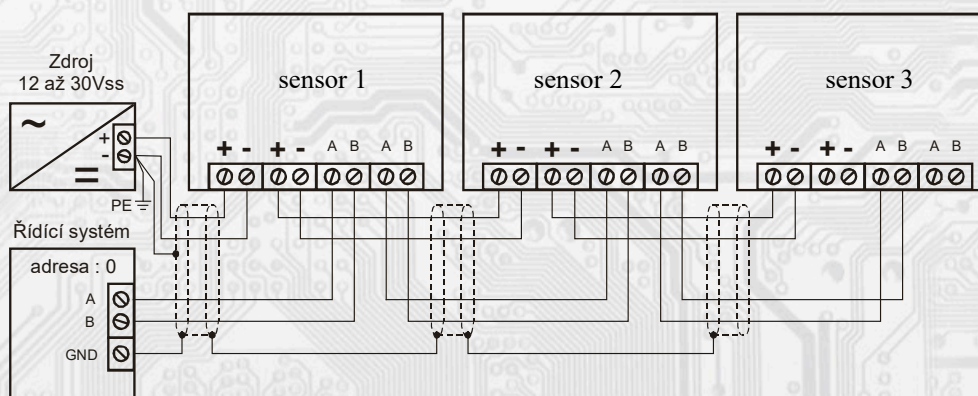

2.1 Description of registers of the device:

During the transfer the register addresses are indexed from zero, i.e. register 0x0001 is physically sent through the busbar as 0x0000... (zero based addressing).

The Holding registers will be mentioned in the description together with the function code field 4xxxx and the Input registers including 3xxxx. Thus the Holding register 40001 is physically sent through the busbar as register 0000 and the Input register 30001 as 0000.

Examples of communication are shown in Chapter 2.8.

1 Modbus register = 2 Byte

The registers are divided in four basic memory zones:

User registers are situated in the zone of Holding registers at addresses from 40030 to 40036. They are used for preservation of user setting of the device (for example LCD contrast). The registers are accessible due to the remote zeroing of user setting (for example in hotels). The registration in registers is unlimited and unprotected. The change of setting and at the same time the registration in FLASH is done only after writing 0xC002 (49154 dek) to 40029 – the Register Status. All user registers enable the parallel manual access from the device menu and these changes are automatically saved in FLASH.

The configuration registers are situated in the zone of Holding registers at addresses 40041 to 40140. They are used for configuration of the device. The registration in registers is protected and allowed under the configuration mode, i.e. when the jumper shorts out the link J6. In this mode the device communicates at dedicated address 255 of the Baud rate 19200 Bd. The configuration registers can be rewritten only using the communication protocol and under the above stated conditions. The change of setting and at the same time the registration in FLASH is done only after writing 0xC003 (49155 dek) to 40029 – the Register Status.

The **information registers** are situated in the zone of Input registers at addresses 30001 to 30032. They serve for unchanged preservation of device identification data.

The **Status Register** serves for two-way communication between the device and the superior system. The device notifies the superior system of the internal status and the superior system sends requests for performance of commands.

STATUS Information messages from the device to the superior system:

- Normal Run, 0x0000 (0 dek) the device works in normal operational mode
- Memory Read, 0xB001 (45057 dek) the device is reading from FLASH
- Memory Write 0xB002 (45058 dek) the device is registering to FLASH

STATUS Error messages from the device to the superior system:

- CRC Error 0xBE00 (48640 dek) Application program is damaged in the FLASH memory
- Sensor Error 0xBE02 (48642 dek) Error of communication with the sensor
- Memory Error 0xBE03 (48643 dek) Error of communication with FLASH

STATUS Commands for the device issued from the superior system:

- Clear STATUS 0x0000 (0 dek) writes 0 to the register
- Write Area 1 0xC001 (49153 dek) it rewrites the Operational registers to FLASH
- Write Area 2 0xC002 (49154 dek) it rewrites the User registers to FLASH
- Write Area 3 0xC003 (49155 dek) it rewrites the Configuration registers to FLASH

In brackets behind the registers described, abbreviations of possible features may appear:

- R Read for reading
- W Write for writing
- WP Write protect for protected writing
- M Parallel manual access from the device menu

2.2 Description of operational registers:

Saving to FLASH is done just after writing 0xC001 (49153 dek) to 40029 – the Register Status.

				Modbus register [dek]
Measured temperature	Measured humidity	-	-	1 - 4
-	-	-	-	5 - 8
-	-	-	-	9 - 12
-	-	-	-	13 - 16
-	-	-	-	17 - 20
Digital input (DI)	-	-	Digital output (DO)	21 - 24
-	-	-	-	25 - 28

4001 (R) – Measured temperature:

is detected with an inbuilt digital sensor that is built into the front panel of the cover and connected to the circuit board through the connector via the flexible cord. The value from the sensor is accessible on line RS485.

It is sent in °C in form of 16-bit number with sign (signed integer) multiplied by the constant 10: 0x00FB = 251dek = 25.1°C.

40002 (R) – Measured relative humidity of air:

is sensed with built-in digital sensor that is built into the front panel of cover and connected to the circuit board through the connector via the flexible cord. The value from the sensor is accessible on line RS485.

It is sent in % in form of 16-bits number with sign (signed integer) multiplied by the constant 10: 0x0164 = 356dek = 35.6%.

40021 (R) – Digital input:

Indicates the current state of DI. The number format is 16-bit unsigned integer, the range is 1 bit Lsb of register. Terminals 9,10 disconnected = 0, Terminals 9,10 connected = 1.

40024 (R,W) – Digital output:

The current value of DO. The number format is 16-bit unsigned integer.

DO can be configured into two operational modes, as the two-status digital output or the proportional digital output. It depends on the setting of configuration registers 40051 – Digital output TOP and 40052 – Digital output PRESC, described in Chapter 2.5.

The two-status DO is controlled by values, disconnected = 0, connected = Digital output TOP +1.

2.3 Description of the Status Register:

				Modbus register [dek]
Status Register				29

40029 (R,W) - Status Register:

It provides the superior system with information on the internal status of the device, for example the current error statuses or information that the manual setting menu is currently activated by the user. At the same time it serves as the receiving register for special commands, for example rewrite/backup of working registers to FLASH.

The number format is 16-bit unsigned integer.

See the detailed description in the Status Register in Chapter 2.1 Description of device registers.

2.5 Description of configuration registers:

The controller may only be configured if jumper J6 (authorisation of configuration values registration, setting of fixed address of controller 255 and setting of the Baud rate 19200 Bd) is inserted before the device is connected to power supply voltage (by the reset).

The saving in FLASH is done only after writing 0xC003 (49155 dek) to 40029 – the Register Status.

Text 1	Text 2	Text 3	Text 4	41 – 44
Text 5	Text 6	Text 7	Text 8	45 – 48
Network address	Baud rate	Digital output TOP	Digital output PRESC	49 – 52
				53 – 56
				57 – 60
				61 – 64
				65 – 68
				69 – 72
				73 – 76
Measured temp., Offset	Measured hum., Offset			77 – 80

40041 ÷ 40048 (R,WP) - Text:

The custom text field. It is determined for the client's identification of the device. The number format is 16-bit unsigned integer. Two ASCII signs can be in one Modbus Register.

40049 (R,WP) – Network address:

The network address of the sensor. The number format is 16-bit unsigned integer. It acquires the values 0 ÷ 255 dek, whereas the address 0 is reserved for the broadcast and the sensor does not respond to it, the address 255 is reserved for the controller configuration. Thus the range of available addresses is 1 ÷ 254.

40050 (R,WP) – Baud rate + parity:

The Baud rate. The number format is 16-bit unsigned integer. It acquires the values 0 ÷ 6 dek.

value [dek]	0	1	2	3	4	5	6
rate [Bd]	1200	2400	4800	9600	19200	38400	57600

MSB: parity

value (dek)	0	1	2
parity	none	odd	even

Example: 0x0004 = 19200Bd, without parity 0x0203 = 9600Bd, even parity

40051 (R,WP) – Digital output TOP:

It defines the number of steps for one period (PWM resolution). The number format is 16-bit unsigned integer, the range is 1 ÷ 65535 dek, the value 0 is not correct and shall not be set.

For example, if you set 99 dek, PWM will be generated in DO (by recording in register 40024 – Digital output) in 100 steps, i.e. directly in units (%). If 255 dek is set, 8bit PWM will be generated in DO...

As for the double-status output, if value 1 is set, then DO will be controlled by recording in register 40024 – Digital output: disconnected = 0, connected = 2 dek.

40052 (R,WP) – Digital output PRESC:

The pre-divider of const. input frequency (2MHz) for the digital output. The number format is 16-bit unsigned integer.

It defines the duration of one step in the period. The basic unit is 0.5 μs and the multiplying ratio corresponds to the value of Digital output PRESC + 1.

Thus, for example, for 40052 – Digital output PRESC = 1 is the basic step length multiplied by the value 2 = 1 μs.

In order to define the period duration the time of one step shall be multiplied by the number of steps in the period (40051 – Digital output TOP).

For example, for 40051 – Digital output TOP = 100 and 40052 – Digital output PRESC = 199 the duration of one step is 0.5 μs x (199+1) = 100 μs, multiplied by the number of steps 100 = 0.01s = 100 Hz. The frequency of PWM signal is 100 Hz, i.e. the period duration of PWM signal is 10 ms.

40077 (R,WP) – Measured temperature, Offset:

Setting the measured temperature offset.

The value is in °C in form of 16 bit number with a sign (signed integer) multiplied by the constant 10.

For example, when it seems that the device shows a value 1°C higher (for example due to the inappropriate location, heating caused by frequent communication with the loaded line...), value – 10 will be set in this register and the device will display and send the temperature value decreased by 1°C than the actually measured value is.

40078 (R,WP) – Measured humidity, Offset:

Setting the measured humidity offset.

The value is in % in form of 16 bit number with a sign (signed integer) multiplied by the constant 10.

2.6 Description of information registers:

				Modbus register [dek]
HW Platform 1	HW Platform 2	HW Platform 3	HW Platform 4	1-4
HW Platform 5	HW Platform 6	HW Platform 7	HW Platform 8	5-8
HW Version 1	HW Version 2	HW Version 3	HW Version 4	9-12
FW Boot Vers. 1	FW Boot Vers. 2	FW Boot Vers. 3	FW Boot Vers. 4	13-16
ID Device 1	ID Device 2	ID Device 3	ID Device 4	17-20
ID Device 5	ID Device 6	ID Device 7	ID Device 8	21-24
FW Applic Vers. 1	FW Applic Vers. 2	FW Applic Vers. 3	FW Applic Vers. 4	25-28
0x0000	0x0000	0x0000	0x0000	29-32

Information on HW and SW of the device, commands 04 (Read Input Registers) are counted at the addresses 30001 to 30032 (including the function code field 3xxxx, i.e. register 30001 is sent through the bus bar as register 0000). The number format is 16 bit unsigned integer. One Modbus register contains two ASCII signs.

3.1 Configuration of sensor using the USBset program:


The configuration application USBset is freely available at producer's web pages. The controlled can be configured only when the jumper J6 is inserted before the connection of supply voltage (reset).

The sensor is connected with PC using the cable of USB mini B type. With connected cable the USB communication has the priority over the line RS485.

After the launching of USBset program, the basic window is opened and the connected sensor is automatically connected with the hosting PC.



With clicking on the button "CONFIGURATION" the configuration window gets opened

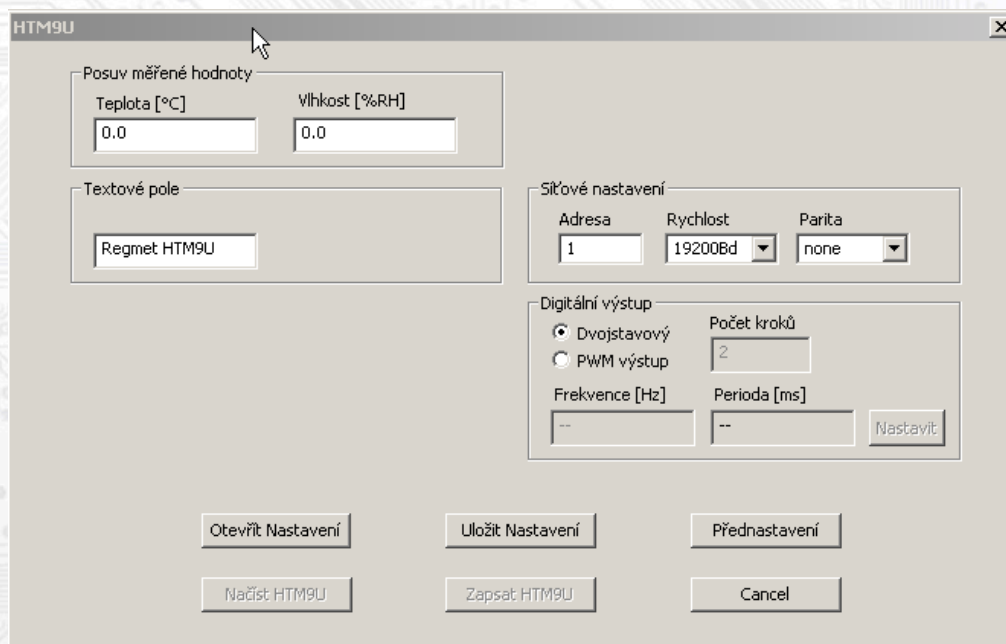

With clicking on the button "Načíst HTM9U" the configuration values from the flash memory of sensor are read.

Description of configuration values (in parenthesis the relevant register for possible setting of controller using other software than USBset is stated – see Table 2):

Shift of measured value:

- **temperature (40077):** Setting of measured temperature offset.

For example, when it seems the device measures over by 1° C (for example due to the inappropriate location, own heating at often communication with loaded line...), the value – 1,0 is set and the device will display and send the temperature value lower by 1°C than the really measured value is.

- **humidity (40078):** Setting of measured humidity offset.

Text field (40041 ÷ 40048): intended for the client's identification of the controller (title, location...).

Network setting:

- **address (40049):** selection of network address in the range 1 ÷ 254 for the operation of sensor in the serial line.

- **rate (40050):** selection of Baud rate in the range 1200 ÷ 57600 Bd for the operation of sensor in the serial line.

Temperature – configuration parameters: unused

Humidity – configuration parameters: unused

Permission of Menu: unused

Mode x: unused

Digital output:

Two-state: The digital output will acquire only two states, on and off.

PWM output: PWM signal with resolution set in the field "Number of steps" and with the frequency set in the field "Frequency" will be generated in the digital output.

Number of steps (40051): The number of steps for 1 period. Setting of PWM resolution. The range of setting from 3 to 65536.

Frequency (40052): Setting of PWM signal frequency. The range of setting depends on setting of number of steps for 1 period, as the maximum allowed frequency of PWM is 20 kHz. After setting of number of steps and PWM frequency it is necessary to click on the button Set (next to the Frequency). The maximum closest real value of frequency will be displayed in the window Frequency.

Period: The period of PWM signal calculated from the set PWM frequency.

After setting of required values and quantities the new configuration values are saved in the flash memory of the device by clicking on the button "Write HTM9U".

The writing into the flash memory is conditioned by insertion of jumper J6 (authorisation for configuration values recording) before the clicking on the button "Write".

By clicking on the button "Cancel" the configuration windows gets closed.


After USB cable disconnection the jumper J6 is pulled out and the device is ready for operation.

"Save setting" – it saves the configuration set in the configuration window as the file with suffix .rgc.

"Open setting" – it sets the values in the configuration window according to the chosen file.

3.2 Variation of the application part FW:

After the USBset program launching click on the Tools – BootLoader and the windows gets opened:

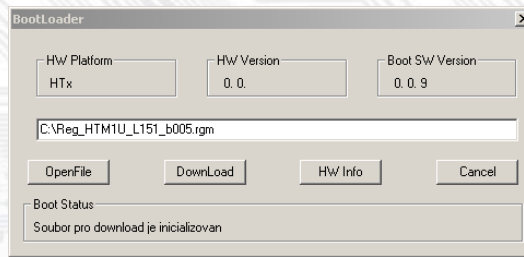

The work with application is conditioned by insertion of the jumper J6 (authorisation for configuration values recording). Using the button “OpenFile“ the new application FW is chosen and using the button “Download“ the FW variation gets started, being automatically controlled by PC and the device.

For the maximum simplicity and safety every device has unambiguous identification of HW platform. This designation describes HW topology and also defines what application FW can be used for the specific type of HW. This information can be read through the button “HW info“.

The application FW are distributed in data format “.reg “. In case of application variation the information on HW platform and HW version are always read after the connection of PC with the device. At the same time, the HW platforms descriptors and HW versions from the file “.reg “ are read. Provided HW platform and HW version are not compatible, the FW variation cannot be done.

Provided the communication failure occurs during the application FW variation, for example due to the supply voltage drop, the application SW will not be functional. In such case the automatic launching of “bootload“ process as well as the automatic reading of HW info will not work. The Bootloader in the device gets always activated after the reset, thus it is necessary to reset manually. Using the RESET jumper or the simple disconnection and subsequent connection of supply voltage.

Provided the automatic sequence of FW variation launching is damaged:

- switch off the device or connect the jumper at RESET pins
- launch the bootload process using the button “DownLoad“
- switch on the supply voltage or release the RESET jumper
- delay between the activation of button “DownLoad“ and the switching on or by the RESET shall be shorter than 2s.

After the USB cable disconnection the jumper J6 is pulled out and the device reset is performed using the short shorting of RST jumper (J7).

The integrity check of content of memories:

The bootloader as well as the application are protected by control total sums. Provided the data integrity is broken, the content of FLASH memory MCU is damaged and the damaged program will not be launched.

Content of Modbus Registers (table 2):

Operational registers

The saving in FLASH is done only after writing of 9xC001 (49153 dek) to 40029 – Status Register.

				Modbus register [dek]
Measured temperature	Measured humidity			1 - 4
				5 - 8
				9 - 12
				13 - 16
				17 - 20
Digital input (DI)			Digital output (DO)	21 - 24
				25-28

Status Register:

Status register				29
-----------------	--	--	--	----

Users registers

The saving in FLASH is done only after writing of 0xC002 (49154 dek) to 40029 – Status Register.

			Bit Field	37-40
--	--	--	-----------	-------

Configuration registers

The saving in FLASH is done only after writing of 0xC003 (49155 dek) to 40029 - Status Register.

Text 1	Text 2	Text 3	Text 4	
Text 5	Text 6	Text 7	Text 8	41 -44
Network address	Baud rate	Digital output TOP	Digital output PRESC	45-48
				49-52
				53-56
				57-60
				61 -64
				65-68
				69-72
				73-76
Measured temp., Offset	Measured humidity, Offset			77-80

